







2011 Chevrolet Silverado HD "Mesh Bolt Over"

After



PART# 38042 - (Polished) 38043 - (Black) Upper

Hardware


- 22 - 10-32 Nyloc Nuts
- 4 - Top "Middle" Brackets 
- 2 - Top "Small Outside" Brackets 
- 4 - Bottom "Middle" Brackets 
- 2 - Bottom "Small Outside" Brackets 
- 4 - Spacers

1



First locate the top trim ring and top mesh. Lay trim ring on a protective work surface, next place the mesh and align so that the mesh clears the mounting studs. Next place the supplied spacers on the mounting stubs of the bottom row. Next place trim ring and mesh into stock grille shell opening and center. Place the supplied brackets in place and secure with the supplied 10-24 nyloc nuts. Check alignment before final tightening of the nuts.

2

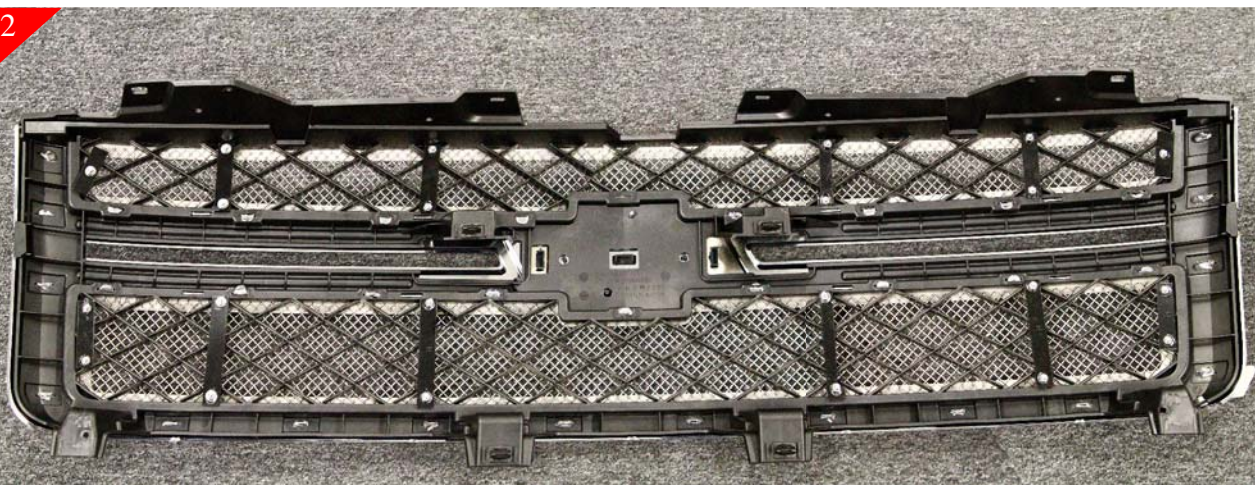

Repeat process for the bottom except for there are no spacers required for attaching the bottom portion of mesh grille. Lay trim ring on a protective work surface, next place the mesh and align so that the mesh clears the mounting studs. Next place trim ring and mesh into stock grille shell opening and center. Place the supplied brackets in place and secure with the supplied 10-24 nyloc nuts. Check alignment before final tightening of the nuts.