




41111/ 41112 / 41113
1958 Chevrolet Passenger

For installation of billet grilles that require cutting of the stock shell, proper tools, knowledge and skill are needed. Carriage Works is not responsible for care & accuracy of the installation, only for Fit & Finish of its products. Use a qualified installer or contact original vendor for references to complete all instructions.

Step 1: Remove Factory grille.

Step 2: Attach the (2) Z-Brackets to top of grille using supplied #8 x 5/8" Phillips Pan Head Screws & U-Clips as per illustration below.

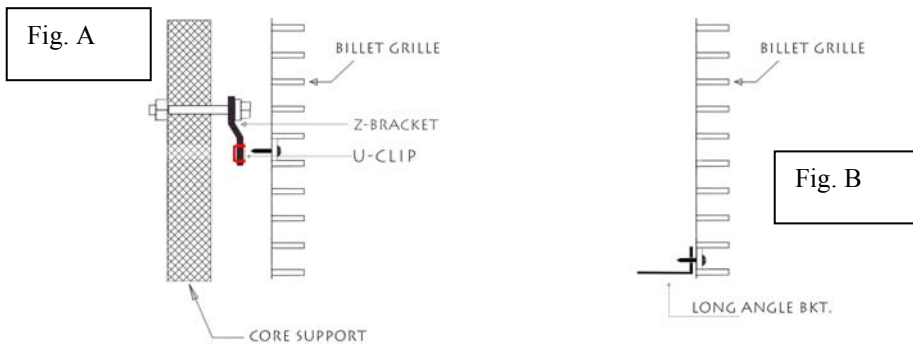

Step 3: Attach the (2) Long Angle Brackets to the 2-center tabs on bottom of billet grille as shown above (Fig. B).

Step 4: Attach the (2) Short Angle Brackets to the 2-outer tabs on bottom of billet grille. Attach same as (Fig. B).

Step 5: Center Billet Grille in car and mark center line of brackets on car's core support & drill a 9/32" hole in each marked location. Use 1/4-20 bolts & nuts to attach.

Note: Please adjust horizontal blades if irregular. This is the result of shipping and handling outside of Carriage Works control.




41111/ 41112 / 41113
1958 Chevrolet Passenger

For installation of billet grilles that require cutting of the stock shell, proper tools, knowledge and skill are needed. Carriage Works is not responsible for care & accuracy of the installation, only for Fit & Finish of its products. Use a qualified installer or contact original vendor for references to complete all instructions.

Step 1: Remove Factory grille.

Step 2: Attach the (2) Z-Brackets to top of grille using supplied #8 x 5/8" Phillips Pan Head Screws & U-Clips as per illustration below.

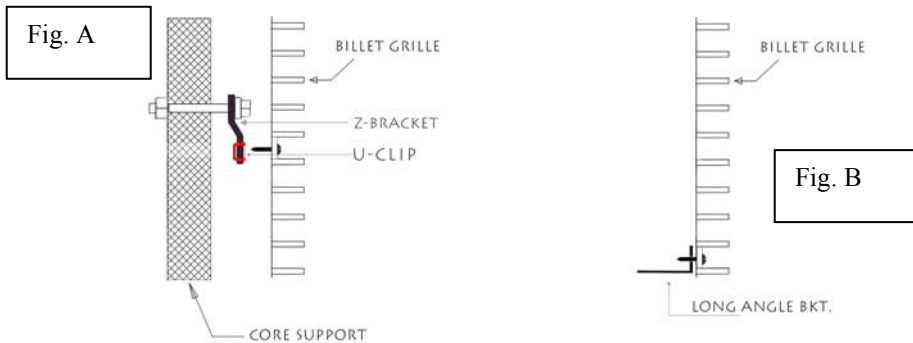

Step 3: Attach the (2) Long Angle Brackets to the 2-center tabs on bottom of billet grille as shown above (Fig. B).

Step 4: Attach the (2) Short Angle Brackets to the 2-outer tabs on bottom of billet grille. Attach same as (Fig. B).

Step 5: Center Billet Grille in car and mark center line of brackets on car's core support & drill a 9/32" hole in each marked location. Use 1/4-20 bolts & nuts to attach.

Note: Please adjust horizontal blades if irregular. This is the result of shipping and handling outside of Carriage Works control.