



1994-98 Ford Mustang

PART # 41461 - 41462 - 41463




Hardware

- 1 - Hood Release
- 2 - Upper Brackets
- 2 - Lower Brackets
- 8 - #8 x 5/8" black Phillips pan head
- 6 - U-Clips
- 2 - 1/4-20 Loc Nuts
- 2 - 1/4-20 x 3/4" SHCS




STEP 1 Remove core support cover by lifting the 8 plastic rivets as shown above.

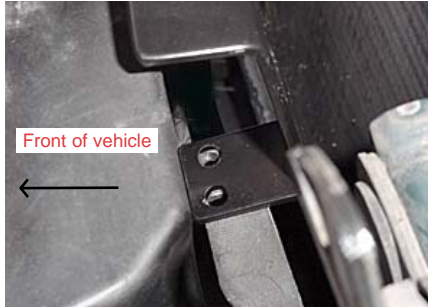


STEP 2 Then remove the mustang emblem. Align hood bracket and mark holes. Using a 9/32" drill marked locations. Then using the supplied 1/4-20 x 3/4" bolts and loc nuts attach the hood release bracket.

NOTE: MAKE SURE BRACKET IS INSTALLED AS SHOWN. IF NOT PROPERLEY INSTALLED THE HOOD WILL NOT OPEN.

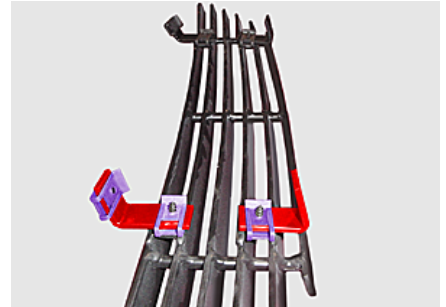

STEP 3 Attach Brackets loosely as shown above.

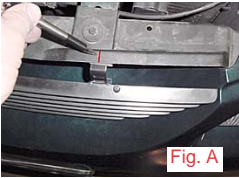




STEP 4 Center billet grille and mark center line of the top bracket on plastic shroud (Fig A.). Then mark and drill 1/8" hole 1/4" from the front edge on both top left & right brackets.



STEP 5 Attach billet grille at each drill location (step 4 B.) as shown above.



STEP 6 Mark location of bottom tab as shown above. Then remove billet grille and drill 1/8" hole at marked location.

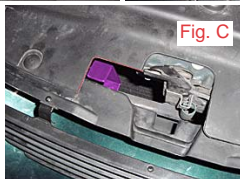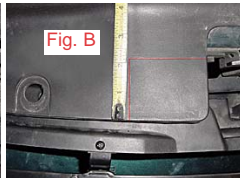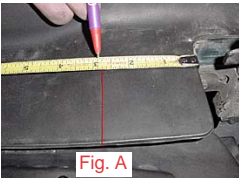

STEP 7 Cut corner of core support cover 2 3/4" wide x 2 1/4" deep, from hood release area as shown in figure A & B.

Figure C showing complete cut with new hood release.

STEP 8 Re-install grille and core support covers. Make sure all fasteners are tight, installation is complete.

NOTE: Please adjust horizontal blades if irregular. This is the result of shipping and handling outside of Carriage Work's control.

Also Carriage Works Inc. recommends applying a high quality automotive wax to maintain the original appearance.