




## 42371/ 42372 / 42373 BUMPER 2005 Ford Mustang

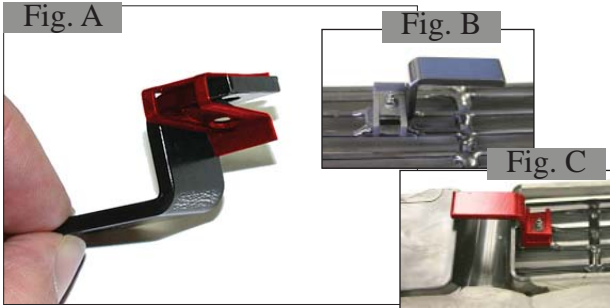

First attach the supplied U-Clips to brackets as shown above (Fig A). Then loosely attach the bracket to the inner (2) tabs of the Billet Grille as shown (Fig B). This allows you to rotate the brackets out of the way to place into opening. (Fig C) is showing bracket and billet grille in place, picture was taken from the backside.



Place Billet Grille into opening and center. Reaching under the front of the car rotate the brackets in place and tighten. Then using the supplied Toggle Bolt Hardware attach on the outer (2) tabs as shown above.

For installation of billet grilles that require cutting of the stock shell, proper tools, knowledge and skill are needed. Carriage Works is not responsible for care & accuracy of the installation, only for Fit & Finish of its products. Use a qualified installer or contact original vendor for references to complete all instructions.

NOTE: Please adjust horizontal blades if irregular. This is the result of shipping and handling outside of Carriage Work's control. Also Carriage Works Inc. recommends applying a high quality automotive wax to maintain the original appearance.