



2006 Nissan Altma

Part# 42671 (Brushed) 42672 (Polished) 42673 (Black)

After




For installation of billet grilles that require cutting of the stock shell, proper tools, knowledge and skill are needed. Carriage Works is not responsible for care & accuracy of the installation, only for Fit & Finish of its products. Use a qualified installer or contact original vendor for references to complete all instructions.

NOTE: Please adjust horizontal blades if irregular. This is the result of shipping and handling outside of Carriage Work's control. Also Carriage Works Inc. Recommends applying a high quality automotive wax to maintain the original appearance.

HARDWARE


- 2 - Brackets Top 
- 2 - Brackets Bottom 
- 6 - U-Clips
- 6 - #8 x 5/8" Phil Pan head Screws
- 2 - Rivets
- 2 - Washers

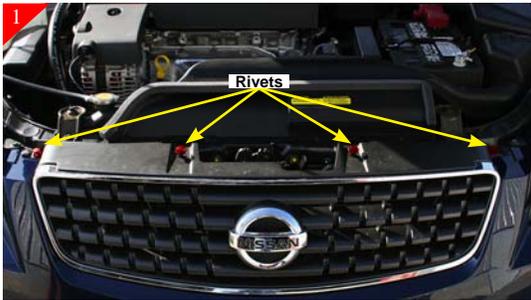


Open hood and remove the (4) plastic push pull rivets shown above in "RED".



There are (4) clips that are located at the bottom of the stock grille shell that need to be released. Do so by reaching behind the stock shell and pulling up on the clips to release. Shell will be free at this point.

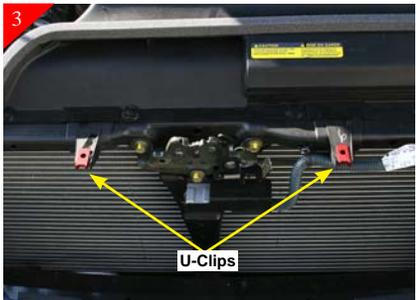

Place (2) of the supplied u-clips on the stock plastic rivet mounting locations as shown above.

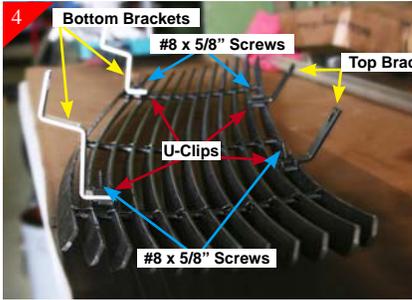

Place the supplied U-Clips on brackets as shown above. Then attach the brackets to the billet grille using the supplied #8 x 5/8" Phil pan head screws.




Place billet grille into opening and center. Then attach the top of the billet grille as shown above using the supplied #8 x 5/8" Phil pan head screws.



Next you will be marking the holes for the lower brackets. Do so by reaching behind the billet grille and mark the hole location in the bumper support. If necessary but not recommended in order to reach the lower brackets you may have to undo the top portion of the billet grille, but make sure that the billet grille is flush with the opening before marking.



Remove the billet grille from the opening and using a 3/16" drill bit, drill in the just marked locations as shown above.

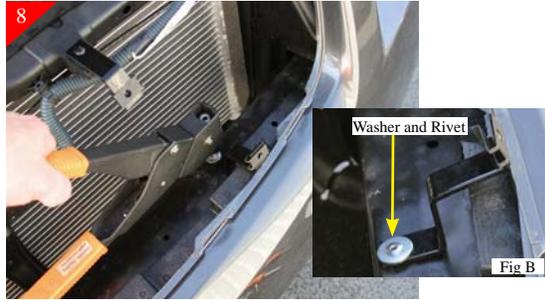

Now attach the lower brackets to the bumper support, by using the supplied Rivets and Washers. (Fig. B shows completed attachment of lower bracket).



Attach the billet grille to the brackets using #8 x 5/8" Phil pan head screws. Carefully close the hood and check for alignment of the hood line. You may need to adjust a little, do so by loosening the #8 screws and adjust accordingly and then tighten.