



2007 GMC Yukon (Full Bumper/Covers Tow Hooks)

After

Photo shown W/Bolt Over Upper grille Part#4313



PART# 43121(Brushed) - 43122(Polished) - 43123(Black)

Hardware

- 4 - 10/24 x 3" Phil head bolts
- 4 - 10/24 Nyloc nuts
- 4 - Washers
- 4 - Square spacers


Before



1 Locate the (2) plastic rivets in the tow hook area shown above in RED.



2 Then using a regular screwdriver or pry tool remove the rivets as shown above and repeat for the other side.

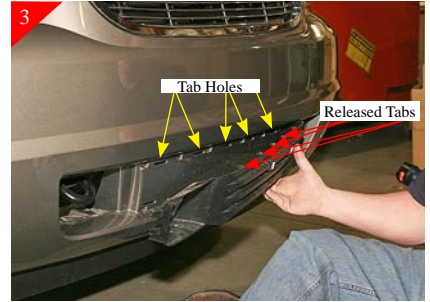

3 With the plastic rivets removed you will need to reach thru from under front of the vehicle and release the tabs located on the backside of the stock black plastic bumper covering. Do so by pushing on the center portions of the tabs to release.



4 Place the supplied bolts thru the mounting tabs on the billet grille. Then place only on the bottom bolts (2) supplied square spacers on the backside as shown above.



5 Now place billet grille into opening and center. There are slots in the bumper opening where the tabs on the black plastic bumper cover attached. This is where the bolts go thru. (Ref step 3).



6 Attach the billet grille using the supplied Nyloc nut and washer.

Completed Installation

For installation of billet grilles that require cutting of the stock shell, proper tools, knowledge and skill are needed. Carriage Works is not responsible for care & accuracy of the installation, only for Fit & Finish of its products. Use a qualified installer or contact original vendor for references to complete all instructions.

NOTE: Please adjust horizontal blades if irregular. This is the result of shipping and handling outside of Carriage Works control. Also Carriage Works Recommends applying a high quality automotive wax to maintain the original appearance.