





# 2006 Toyota Sequoia Bumper

Part# 43191 (Brushed) 43192 (Polished) 43193 (Black)

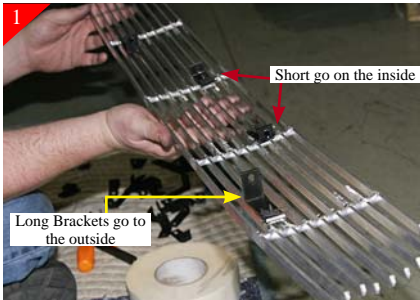
After



Hardware

- 2 - Brackets 
- 2 - Brackets 
- 8 - U-Clips
- 8 - #8 x 5/8" Phillips Screws

Before



Attach the supplied brackets to billet grille as shown above. Using the supplied hardware place u-clips on brackets and attach bracket to billet grille using #8 x 5/8" screws.



Tape bumper opening using masking tape to protect during install. Place billet grille into opening and center. Then using a scribe or other marking tool mark the hole locations where meets vehicle as shown above.



Using a 3/16" drill bit, drill in the just marked locations as shown above.



After drilling remove the brackets from the billet grille. Then place supplied U-clips on opposite end of the brackets. Using the supplied #8 x 5/8" Phillips head screws attach brackets to vehicle as shown above.



With brackets attached, simply attach billet grille to brackets using the supplied #8 x 5/8" Phillips head screws.

## Completed Installation

For installation of billet grilles that require cutting of the stock shell, proper tools, knowledge and skill are needed. Carriage Works is not responsible for care & accuracy of the installation, only for Fit & Finish of its products. Use a qualified installer or contact original vendor for references to complete all instructions.

NOTE: Please adjust horizontal blades if irregular. This is the result of shipping and handling outside of Carriage Work's control. Also Carriage Works Inc. Recommends applying a high quality automotive wax to maintain the original appearance.