



# 2007 Dodge Durango

PART# 43831 (Brushed) 43832 - (Polished) 43833 - (Black) Upper




## Hardware

- 2 - Brackets
- 4 - U-Clips
- 4 - #8 x 5/8" Phillips head Screws
- 2 - 1/4-20 x 1 1/4" Bolts
- 2 - 1/4-20 Nyloc Nuts




Start by remove the plastic core support cover. Do so by removing the (6) plastic push pull rivets from across top of cover (Fig A). Then locate and remove the (4) 13mm bolts located across top of stock shell shown above (fig B).

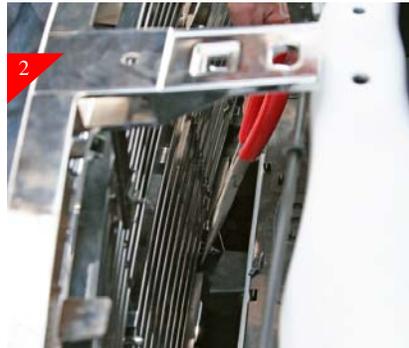

Slightly pull top portion of stock shell outward so that you can reach the bottom clips holding stock shell in place. Using a pair of long needle nose pliers squeeze the clip together and pull outward on stock shell to release. The needle nose pliers will aid in the release of the clips as shown above. Stock shell will be free at this point.



Lay stock grille shell face down and remove the black plastic backing by unclipping all attachment point.

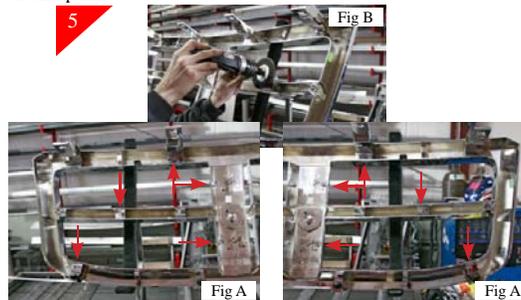

Locate and remove the tabs shown in red in the above (2) images (Fig A). Do so by using a cut-off wheel or other cutting devise (Fig B). This allows the billet grille to set flush with the backside of the stock shell.



Move stock shell to protective works surface. Using masking tape, tape the face of the grille shell to protect during the installation.

Place billet grille into opening and center. Using a scribe mark the (2) mounting hole locations in stock shell (Located in the center cross bar of stock shell). After marking remove billet grille and drill holes using a 17/64" drill bit.



Attach billet grille to the just drill hole locations using the supplied 1/4-20 x 1 1/4" black bolts and 1/4-20 Nyloc nuts. Place the nut on the underside of the just drilled holes and attach using the supplied bolt. Now attach the supplied brackets to the top mounting tabs in billet grille using the supplied U-clips and #8 x 5/8" screws. After attaching brackets using a scribe and mark the mounting hole locations as shown above.



After marking hole locations, loosen bracket and swing out of the way for drilling. Drill the just marked locations using a 17/64" drill bit.



Place the supplied U-clips on the just drilled mounting locations as shown above (Fig A). Attach brackets to U-clips using the supplied #8 x 5/8" phillips head screws (Fig B). Place stock shell back on vehicle (Reference steps 1 & 2).

NOTE: Please adjust horizontal blades if irregular. This is the result of shipping and handling outside of Carriage Works control. Also Carriage Works Recommends applying a high quality automotive wax to maintain the original appearance.

For installation of billet grilles that require cutting of the stock shell, proper tools, knowledge and skill are needed. Carriage Works is not responsible for care & accuracy of the installation, only for Fit & Finish of its products. Use a qualified installer or contact original vendor for references to complete all instructions.