

Thank you for purchasing the CW Grilles **4032. 1988-91 GMC Crew Cab, Suburban, & Jimmy**

For installation of billet grilles that require cutting of the stock shell, proper tools, knowledge and skill are needed. CW is not responsible for care & accuracy of the installation, only for Fit & Finish of its products. Use a qualified installer or contact original vendor for references to complete all instructions.

### Hardware Included


- (1) 1/4-20 NYLOC NUT
- (1) 1/4-20 X 3/4 SOCKET HEAD
- (7) 1/8 X 3/8 POP RIVETS

### Brackets Included

- (1) B-4032-1 BRACKET



**STEP 1** Remove stock grille shell from vehicle. Then tape off all chrome or painted surfaces. To keep from scratching face of grille shell.

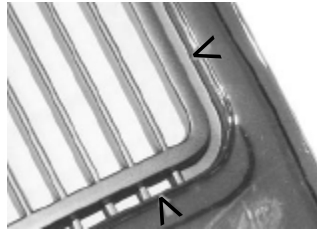


**STEP 2** Remove the center section of grille shell by using a cut-off wheel. Cut along the outer most edge of grille shell as shown above.



**STEP 3** After removing center section grind or sand smooth all rough areas. NOTE: For better appearance you may want to paint the sanded areas.



**STEP 4** Along the top of the grille shell there are 3 molded tabs (left, right, & center), shown above. You will need to remove the center tab completely, using a cut-off wheel.

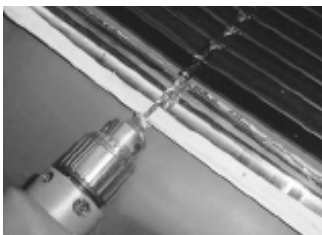

**STEP 5** Set Billet grille into grille shell. Then mark center locations of each of the vertical rods of billet grille. Then drill a 1/8" hole at each location.

**STEP 6** Attach billet grille using supplied rivets at each of the drilled locations.

**STEP 7** Place supplied bracket on hood latch. Then mark the hole location and drill a 1/4" hole. Then attach with supplied 1/4-20 nut & bolt an tighten.

**STEP 8** Remove the tape and re-attach the grille assembly to the vehicle.

