



**CW GRILLES**

A DIVISION OF  
CW LASER AND FABRICATION

# Installation Guide

**Part # 4079**

(-1, Brushed; -2, Polished; -3, Black)

This model fits:

**1955 Chevy Passenger**

Thank you for purchasing the CW Grilles **4079**.

For installation of billet grilles that require cutting of the stock shell, proper tools, knowledge and skill are needed. CW is not responsible for care & accuracy of the installation, only for Fit & Finish of its products. Use a qualified installer or contact original vendor for references to complete all instructions.

## Hardware Included

- ( 8) 1/4-20 X 3/4 SOCKET HEADS
- ( 8) 1/4-20 NYLOC NUTS
- (12) #8 X 5/8 PHILIPS HEAD SCREWS
- (12) #8 U-CLIPS

## Brackets Included

- (1) B-4079-4 BRACKETS
- (1) B-4079-5 BRACKETS
- (2) B-4138-2 [4079-6] BRACKETS
- (2) B-4079-1 BRACKETS
- (4) B-4079-2 BRACKETS
- (4) B-4079-3 BRACKETS




**STEP 1** Start by removing the trim ring around stock grille shell. You do not need to remove the trim piece that's attached to the hood. Then remove the Stock grille by removing screws along the top & bottom of grille. There are 2 bolts in the left & right fender area that need to be removed in order for the center section to be removed.



**STEP 2** Next attach the supplied brackets to the left & right Trim pieces as shown. You will be using the stock trim posts & stock nuts to attach the brackets.  
**NOTE:** The bracket indicated is left and right specific.



**STEP 3** Next hold side trim piece up to vehicle with the hood shut and align trim piece as shown. Then using a scribe or sharpie mark the locations of the brackets to be drilled. Then using a 9/32" drill bit, drill in the just marked locations for mounting the trim. Using the supplied 1/4-20 Socket head and 1/4-20 nyloc nut attach brackets to vehicle. Do not tighten brackets at this point, leave loose.

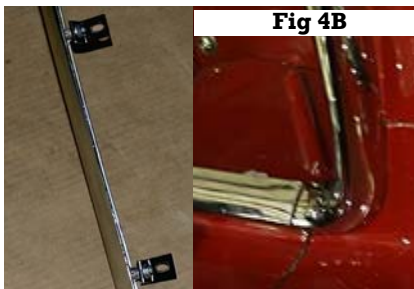


**STEP 4** Attach brackets to bottom trim piece using stock nuts as shown. There is no brackets for the center post. Next align the bottom trim piece with the left & right trim. The bottom trim piece goes under the left & right trim (see Fig 4B).



**STEP 5** With the bottom trim piece in place you will need to mark the locations of the brackets. Then drill a 9/32" hole in each of the marked locations. Then attach bottom trim by using the supplied 1/4-20 Socket head and 1/4-20 nyloc nut.



**STEP 6** At this point you can tighten all hardware that holds the trim to the vehicle. Next **CAREFULLY** test close the hood and check for alignment of all trim.

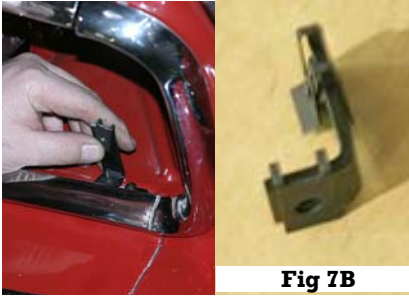

**Fig 7B**

**STEP 7** Next you will be attaching Bottom brackets along bottom of grille opening. Attach u-clips as shown above (Fig 7B) first. Then attach brackets using supplied #8 x 5/8" screw up through the bottom into the u-clip. The brackets mount in stock hole locations.



**STEP 8** Place the supplied u-clips on both sides of the supplied Top billet grille brackets. Then attach brackets to billet grille using the supplied #8 x 5/8" screws.  
NOTE: It is not necessary for the billet grille to be placed into opening for attaching top billet grille brackets.



**STEP 9** Place Billet grille into opening and center. Attach top of the billet grille to using supplied #8 x 5/8" screws as shown above. Screws go thur stock mount-ing locations in core support.



**STEP 10** Then attach bottom of billet grille using #8 x 5/8" screw to bottom brackets as shown. Starting at the center and working out, adjusting as you go to align along bottom.



**Top Billet Grille Brackets**

4079-1



**Side Molding Left & Right**

4079-4

4079-5



**Side Molding Left & Right**

4138-2 [4079-6]



**Bottom Billet Grille Brackets**

4079-3



**Bottom Molding**

4079-2