



Installation Guide

Part # 4100

(-1, Brushed; -2, Polished; -3, Black)

This model fits:

1999-2002 Ford Lightning Bumper Grille

Thank you for purchasing the CW Grilles **4100.**

For installation of billet grilles that require cutting of the stock shell, proper tools, knowledge and skill are needed. CW is not responsible for care & accuracy of the installation, only for Fit & Finish of its products. Use a qualified installer or contact original vendor for references to complete all instructions.



Hardware Included

- (4) #8 X 1 PHILIPS HEAD SCREWS
- (4) #8 U-CLIP

Brackets Included

- (4) B-4129-2 [4100-1] BRACKETS

Step 1 Remove the plastic push rivets toward the rear of the vehicle on the rubber splash guard under the bumper.

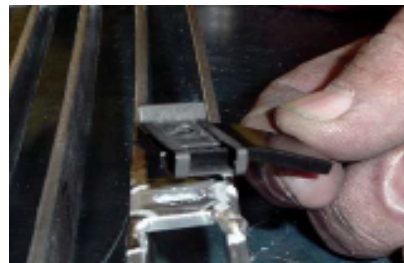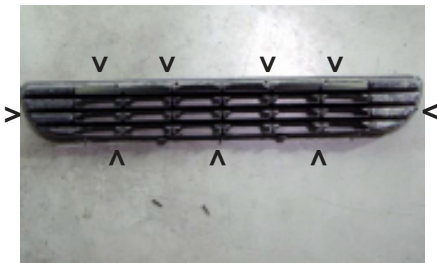

Step 2 Remove the (9) 7mm screws holding the factory insert in place.

Step 3 Loosely attach the mounting clamps as shown to the billet grille.

Step 4 Carefully insert and center the billet grille into the bumper opening and set the grille back against the small bumper lip and tighten the clamps as shown.



