



# Installation Guide

## Part # 4111

(-1, Brushed; -2, Polished; -3, Black)

This model fits:

**1958 Chevrolet Passenger**

Thank you for purchasing the CW Grilles **4111**.

For installation of billet grilles that require cutting of the stock shell, proper tools, knowledge and skill are needed. CW is not responsible for care & accuracy of the installation, only for Fit & Finish of its products. Use a qualified installer or contact original vendor for references to complete all instructions.

### Hardware Included

- (6) 1/4-20 X 3/4 SOCKET HEADS
- (6) 1/4-20 NYLOC NUTS
- (8) #8 X 5/8 PHILIPS HEAD SCREWS
- (8) #8 U-CLIP

### Brackets Included

- (2) B-4111-1 BRACKETS
- (2) B-4111-2 BRACKETS
- (2) B-4111-3 BRACKETS

**STEP 1** Remove Factory grille.

**STEP 2** Attach the (2) Z-Brackets to top of grille using supplied #8 x 5/8" phillips screws & u-clips as per illustration below, in Diagram A.

**STEP 3** Attach the (2) Long Angle brackets to the 2-center tabs on bottom of billet grille as shown below, in Diagram B.

**STEP 4** Attach the (2) Short Angle brackets to the 2-outer tabs on bottom of billet grille, same as the Long Angle brackets.

**STEP 5** Center Billet Grille in car and mark center line of brackets on car's core support & drill a 9/32" hole in each marked location. Use 1/4-20 x 3/4" socket heads & nyloc nuts to attach.

**NOTE** A drop of red or blue Loctite on the bolts will insure the bolts won't back out due to road vibration.

Diagram A

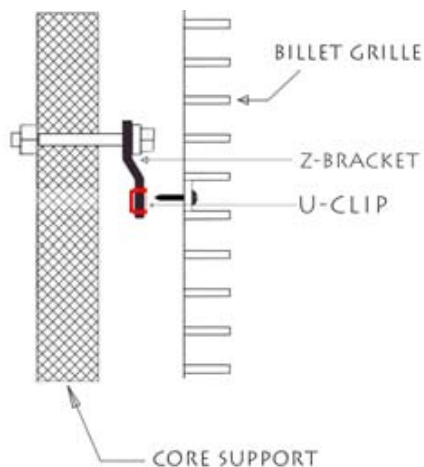


Diagram B

