

Part # 4112

(-1, Brushed; -2, Polished; -3, Black)

This model fits:

1962-64 Chevy Nova


Thank you for purchasing the CW Grilles **4112.**

For installation of billet grilles that require cutting of the stock shell, proper tools, knowledge and skill are needed. CW is not responsible for care & accuracy of the installation, only for Fit & Finish of its products. Use a qualified installer or contact original vendor for references to complete all instructions.


Hardware Included

- (6) #8 X 5/8 PHILIPS HEAD SCREWS
- (6) #8 U-CLIPS

Brackets Included

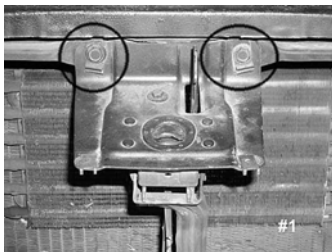

STEP 1 Remove the 2 bolts from top of hood latch support.

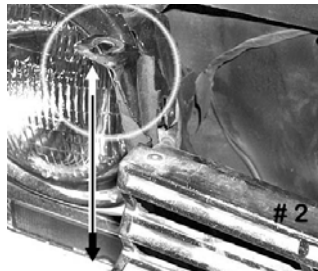

STEP 2 Remove the top & bottom bolts from side supports of factory stock grille. Then remove the blinker lens cover from each side.



STEP 3 Remove the bolt that secures the bottom of the hood latch in place.

STEP 4 At this point the entire factory stock grille should be able to be removed from the car. Remove all rivets that hold the hood latch support to the factory stock grille.




STEP 5 Grind two rivets holding the side supports onto the factory stock grille, then cut as shown.



STEP 6 Reinstall side supports at original mounting position.



STEP 7 Cut hood latch support as shown.

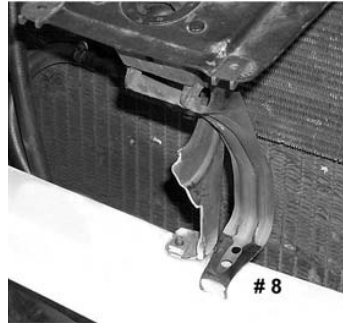

STEP 8 Attach screw u-clips at each side bracket support and top latch support. Use #8 x 5/8" screws to attach billet grille in place.

