



# Installation Guide

## Part # 4145

(-1, Brushed; -2, Polished; -3, Black)

This model fits:

**1993-97 Chevy Camaro**


Thank you for purchasing the CW Grilles **4145.**

For installation of billet grilles that require cutting of the stock shell, proper tools, knowledge and skill are needed. CW is not responsible for care & accuracy of the installation, only for Fit & Finish of its products. Use a qualified installer or contact original vendor for references to complete all instructions.

### Hardware Included

(4) 10-24 X 1 1/4 PHILLIPS BOLTS

### Brackets Included

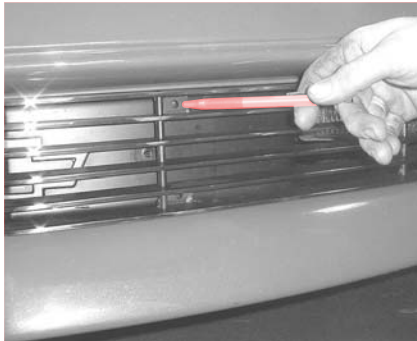

**STEP 1** Place grille into bumper and center. The grille will set inside the I.D. of the opening.



**STEP 2** Drill 1/8" hole at each marked location.



**STEP 3** Attach grill using the supplied 4 - #10 x 1 1/4" as shown.



