



**CW GRILLES**

A DIVISION OF  
CW LASER AND FABRICATION

# Installation Guide

**Part # 4149**

(-1, Brushed; -2, Polished; -3, Black)

This model fits:

**1980-86 Ford F-Series & Bronco**

Thank you for purchasing the CW Grilles **4149.**

For installation of billet grilles that require cutting of the stock shell, proper tools, knowledge and skill are needed. CW is not responsible for care & accuracy of the installation, only for Fit & Finish of its products. Use a qualified installer or contact original vendor for references to complete all instructions.

## Hardware Included


- (4) #8 U-CLIP
- (8) #8 X 5/8 PHILIPS HEAD SCREWS

## Brackets Included

- (2) B-4149-1 BRACKETS



**STEP 1** Remove the stock grille from truck. Using a screw driver remove the 8 screws holding the grille shell to vehicle (shown above).

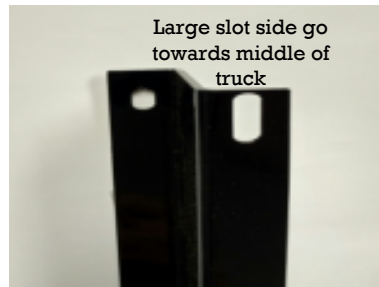

**STEP 2** Next you will be attaching the brackets for mounting the billet grille. Take note of the large bracket, this must point inward.



**STEP 3** Attach brackets to vehicle as shown. Using factory clips & supplied #8 x 5/8" Phillips pan head screws.



**STEP 4** Next you will be installing the billet grille. Take note that there is a top and bottom to the billet grille. The top (The tab is welded in the 3rd bar). The bottom (The tab is welded in the 2nd bar).



**STEP 5** Attach billet grille to brackets (step 3) using #8 x 5/8" Phillips Pan Head Screws & U-Clips.

