

Thank you for purchasing the CW Grilles **4330.**

For installation of billet grilles that require cutting of the stock shell, proper tools, knowledge and skill are needed. CW is not responsible for care & accuracy of the installation, only for Fit & Finish of its products. Use a qualified installer or contact original vendor for references to complete all instructions.

Hardware Included


- (1) 1/4-20 LOW PROFILE NUT
- (6) 1/4 WASHERS
- (8) 1/4-20 X 3/4 SOCKET HEAD BOLTS
- (9) 1/4-20 NYLOC NUTS
- (16) #8 X 5/8 PHILIPS HEAD SCREWS
- (16) #8 U-CLIPS

Brackets Included

- (1) B-4330-5 HOOD RELEASE
- (1) B-4330-4 BRACKET
- (2) B-4330-2 BRACKETS
- (4) B-4330-3 BRACKETS
- (4) B-4330-1 BRACKETS




STEP 1 Lay stock shell face down on a protective work surface. Locate the (4) mounting tabs across top of shell and attach top brackets as shown using 1/4-20 x 3/4" bolts and 1/4-20 nyloc nuts. Do not fully tighten at this point as alignment may be required. Attach supplied u-clips to other end of brackets.

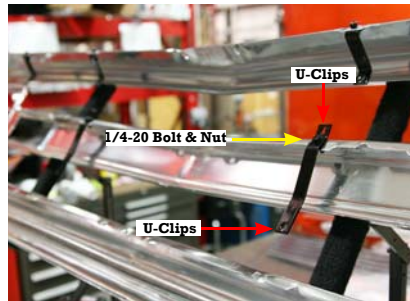

STEP 2 Attach the (2) middle brackets as shown using the supplied 1/4-20 x 3/4" bolts and 1/4-20 nyloc nuts. Again do not fully tighten at this point. Place supplied u-clips on both ends of the brackets.



STEP 3 Place top portion of billet grille into opening and align. Attach billet grille to the already placed brackets using #8 x 5/8" Phillip screws. Now go back and tighten up all the brackets.
NOTE: The difference in the (2) billet grilles is that the TOP BAR in the BOTTOM HALF of billet grille is angled.

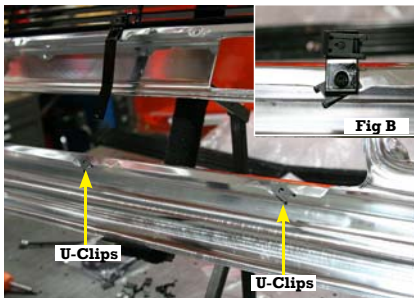

STEP 4 Place the (4) supplied u-clips in stock mounting holes along bottom of shell as shown above. If the mounting tabs get bent it maybe necessary to bend back and or flatten, this can be done using your hands. Now attach supplied bottom brackets to the just placed u-clips using the supplied #8 x 5/8" Phillip screws as shown above (Fig B). Place supplied U-clips on other end of brackets.



STEP 5 Place bottom portion of billet grille into opening and align. Attach billet grille to the already placed brackets using the supplied #8 x 5/8" Phillip screws as shown above.



STEP 6 There is an existing hole in the hood release, where you will attach the supplied hood release extension rod. Attach the rod with the supplied 1/4-20 nuts and washers and pinch together. Slide the release support bracket over the L portion of the rod about midway up the rod. Holding bracket against the vertical center support mark hole locations. Drill hole location using a 1/4" drill bit, then attach using 1/4-20 bolts & nuts. Shown above is a mock layout of the rod & brackets.

