



Installation Guide

Part # 4331

(-1, Brushed; -2, Polished; -3, Black)

This model fits:

1970 Ford F150/250

Thank you for purchasing the CW Grilles **4331.**

For installation of billet grilles that require cutting of the stock shell, proper tools, knowledge and skill are needed. CW is not responsible for care & accuracy of the installation, only for Fit & Finish of its products. Use a qualified installer or contact original vendor for references to complete all instructions.

Hardware Included

- (16) #8 X 5/8 PHILIPS HEAD SCREWS
- (16) #8 U-CLIP

Brackets Included

- (2) B-4331-5 BRACKETS
- (2) B-4331-6 BRACKETS
- (4) B-4331-7 BRACKETS



STEP 1 Remove the stock “egg crate” sections by removing the (4) per side screws as shown above. If you are using your old stock shell you will need to remove the inner plastic screw retainers.



STEP 2 Remove brackets from hardware pack. Place supplied u-clips on all ends of the supplied brackets. Attach the (4) identical top brackets to mounting tabs in shell using the supplied #8 x 5/8” Phillip screws as shown above.



STEP 3 Locate the (2) brackets that have a slightly longer end than the other. These brackets attach to the outer most mounting tab per side in the stock shell. Attach the shorter end to the stock shell using the supplied #8 x 5/8” Phillip screws as shown above.



STEP 4 Attach the remaining (2) brackets to the inner (2) mounting tabs in stock shell per side using the supplied #8 x 5/8” Phillip screws as shown above.



STEP 5 With all brackets attached simply attach billet grille to brackets using the supplied #8 x 5/8” Phillip screws.



Installation Guide

Part # 4331

(-1, Brushed; -2, Polished; -3, Black)

This model fits:

1971-72 Ford F150/250

Thank you for purchasing the CW Grilles **4331.**

For installation of billet grilles that require cutting of the stock shell, proper tools, knowledge and skill are needed. CW is not responsible for care & accuracy of the installation, only for Fit & Finish of its products. Use a qualified installer or contact original vendor for references to complete all instructions.

Hardware Included


- (16) #8 X 5/8 PHILIPS HEAD SCREWS
- (16) #8 U-CLIP

Brackets Included



- (2) B-4331-1 BRACKETS
- (2) B-4331-2 BRACKETS
- (2) B-4331-3 BRACKETS
- (2) B-4331-4 BRACKETS




STEP 1 Remove the stock "egg crate" sections by removing the (4) per side screws as shown above. If you are using your old stock shell you will need to remove the inner plastic screw retainers. Remove brackets from hardware pack. Place supplied u-clips on all ends of the supplied brackets.

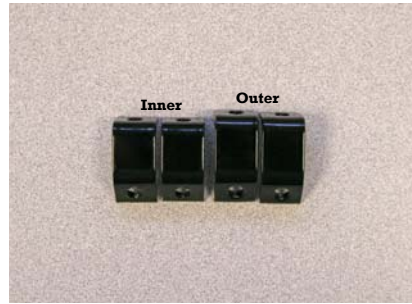

STEP 2 Locate the (4) upper brackets as shown above. The larger (2) attach to the outer most mounting tabs in the stock shell using #8 x 5/8" Phillip screws. The (2) smaller ones attach to the inner most mounting tabs in stock shell using #8 x 5/8" Phillip screws. Please see second image for attachment.

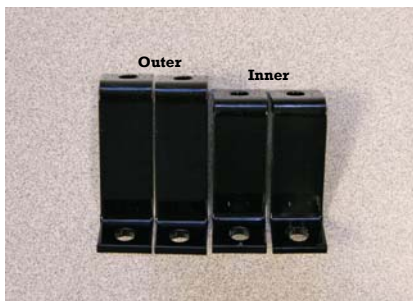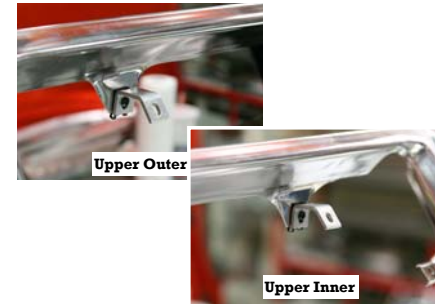

STEP 3 Locate the (4) lower brackets as shown above. The larger (2) attach to the outer most mounting tabs in the stock shell using #8 x 5/8" Philip screws. The (2) smaller ones attach to the inner most mounting tabs in stock shell using #8 x 5/8" Phillip screws. Please see second image for attachment.

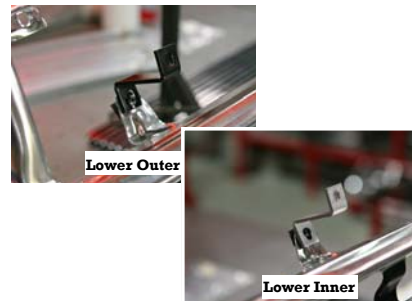

STEP 4 With all brackets attached simply attach billet grille to brackets using the supplied #8 x 5/8" Phillip screws.