

Thank you for purchasing the CW Grilles **4388.**


For installation of billet grilles that require cutting of the stock shell, proper tools, knowledge and skill are needed. CW is not responsible for care & accuracy of the installation, only for Fit & Finish of its products. Use a qualified installer or contact original vendor for references to complete all instructions.

### Hardware Included

- (6) #8 X 5/8 PHILIPS HEAD SCREWS
- (6) #8 U-CLIPS

### Brackets Included

- (1) B-4388-1 BRACKET
- (2) B-4388-2 BRACKETS

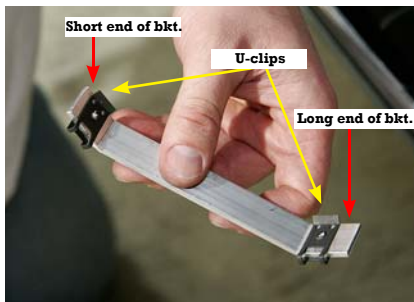

**STEP 1** Locate the (2) supplied brackets shown above, and place the supplied u-clips onto the brackets. Next attach the brackets to the bumper area.  
**Note:** that the longer end of the supplied brackets attaches to the bumper area.

**STEP 2** Next locate holes in stock bumper along the backside of bumper and utilize these holes to attach the brackets from step 1. Using the supplied #8 x 5/8" Phillips screws attach by screwing into the already placed u-clips as shown above.

**STEP 3** Repeat the process for attaching the second bracket. (Ref. step 2).



**STEP 4** Locate the supplied bracket shown above and slide the supplied u-clip on the long end of bracket.

**STEP 5** Along the top there is a hole located in the middle of the bumper opening. Attach the bracket to this location by placing the supplied u-clip on hole then using the supplied #8 x 5/8" Phillips screw to fasten.

**STEP 6** Place the billet grille into the opening (note that it fits **behind the bumper opening.**) Start by placing one end into the bumper opening and sliding it in **from behind..** Keep sliding it until you are able to get the other end in place. After centering, attach the grille using the supplied #8 x 5/8" Phillips screws.

