



Installation Guide

Part # 4412

(-1, Brushed; -2, Polished; -3, Black)

This model fits:

**2006-08 Ford F-150
(Monster Bar) Bumper Grille**

Thank you for purchasing the CW Grilles **4412.**


For installation of billet grilles that require cutting of the stock shell, proper tools, knowledge and skill are needed. CW is not responsible for care & accuracy of the installation, only for Fit & Finish of its products. Use a qualified installer or contact original vendor for references to complete all instructions.

Hardware Included

- (4) 10-24 X 5/8 PHILLIPS BOLTS
- (4) 10-24 NYLOC NUTS

Brackets Included


- (2) B-4353-1 [4412-2] BRACKETS
- (2) B-4271-1 [4412-1] BRACKETS

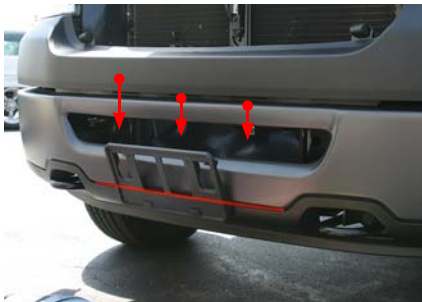

STEP 1 Remove the (5) 8mm bolts by reaching through the front opening of vehicle. Area of bolts to be removed shown above.




STEP 2 Then unclip license frame from vehicle as shown above.

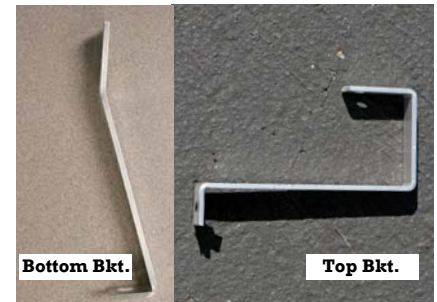

STEP 3 The above brackets are orientated the correct direction for install. Loosely attach brackets to billet grille using the supplied 10-24 x 5/8" bolts and nyloc nuts. Rotate the brackets around so that you can place the billet grille into opening. Rotate the brackets back in place and tighten.



STEP 4 Next you will be attaching the top bracket to the factory 8mm bolts shown above. (Please Ref diagram of attachment of brackets.) Next locate the factory 8mm bolts on lower valence and remove, then attach the bottom bracket to these factory bolts. (Please Ref diagram)

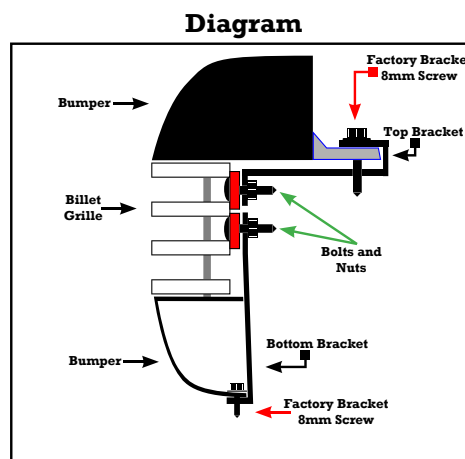

STEP 5 If your state requires you to have a front license plate. Please reattach license frame to vehicle. (Ref Steps 1 & 2.)

