



# Installation Guide

## Part # 4438

(-1, Brushed; -2, Polished; -3, Black)

This model fits:

## 2009-14 Ford F-150 Bumper Grille

Thank you for purchasing the CW Grilles **4438**.



For installation of billet grilles that require cutting of the stock shell, proper tools, knowledge and skill are needed. CW is not responsible for care & accuracy of the installation, only for Fit & Finish of its products. Use a qualified installer or contact original vendor for references to complete all instructions.

### Hardware Included

- (4) 10-24 X 1 PHILLIPS BOLTS
- (4) 10-24 U-NUTS

### Brackets Included

- (2) B-4438-1 BRACKETS
- (2) B-4438-2 BRACKETS

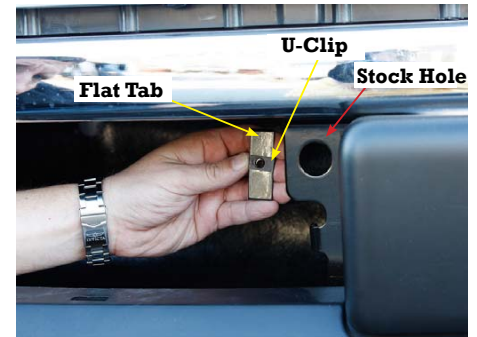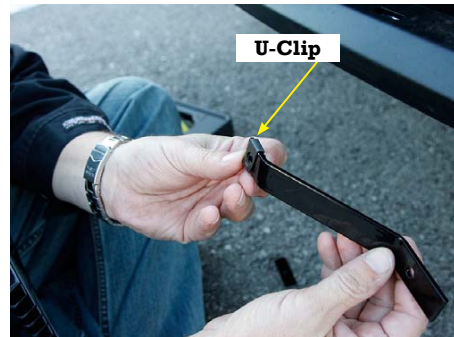

**STEP 1** If your vehicle is equipped with a front license frame holder, you will need to remove for the install. Do so by releasing the tabs in license frame holder. There are 2 snap clips on the top of the holder (shown in Fig 1B), and 2 clips in the bottom (shown in Fig 1C).

**STEP 2** Next locate the 2 long brackets shown above. Then place the supplied u-clips on the short end of both brackets, again shown above. Next locate the 2 flat backing tabs and place supplied u-clips on both brackets.

**STEP 3** Now you will be attaching the brackets to the truck. Place the flat backing tab behind the stock hole location shown above.



**STEP 4** Now attach the long brackets using the supplied 10-24 x 1" phillips bolts. Shown above is the drivers side bracket. Take note as to where the location of the bracket is in the stock hole opening. You will want to have the same amount of open space in the hole for both sides of the truck. So push down and to the outside before tightening.

**STEP 5** Now test fit the billet grille into the opening. You will need to adjust the long brackets as necessary in order for them to align with the mounting tabs in the billet grille. After necessary adjustments attach billet grille using the supplied 10-24 x1" phillips bolts. Tighten all hardware.

