



# Installation Guide

## Part # 4451

(-1, Brushed; -2, Polished; -3, Black)

This model fits:

## 2010-12 Ford Mustang GT Upper 3PCS Kit

Thank you for purchasing the CW Grilles **4451**.

For installation of billet grilles that require cutting of the stock shell, proper tools, knowledge and skill are needed. CW is not responsible for care & accuracy of the installation, only for Fit & Finish of its products. Use a qualified installer or contact original vendor for references to complete all instructions.

### Hardware Included

- (4) 10-24 X 2 PHILLIPS BOLTS
- (4) 10-24 TOGGLE WINGS
- (4) 10-24 X 1 PHILLIPS BOLTS
- (4) 10-24 WELL NUTS

### Brackets Included

**STEP 1** Start by opening hood and removing the plastic core support cover. Do so by removing the plastic push-pull style rivets. Set aside, to replace after install.


**STEP 2** Use supplied hardware and attach per illustration below. Start by placing the supplied 10-24 x 2" phillips bolt through the mounting tabs in billet grille.

**STEP 3** Loosely attach the toggle wing portion to the bolt. Repeat process for remaining attachment points.

**STEP 4** Place billet grille into stock opening and center. Push the toggle bolt wing through the stock grille. Hand tighten bolts, and make any necessary adjustments before fully tighten the grille in place. Do not over tightening bolts.

**NOTE** A drop of red or blue Loctite on the bolts will insure the bolts won't back out due to road vibration.

### Installation diagram

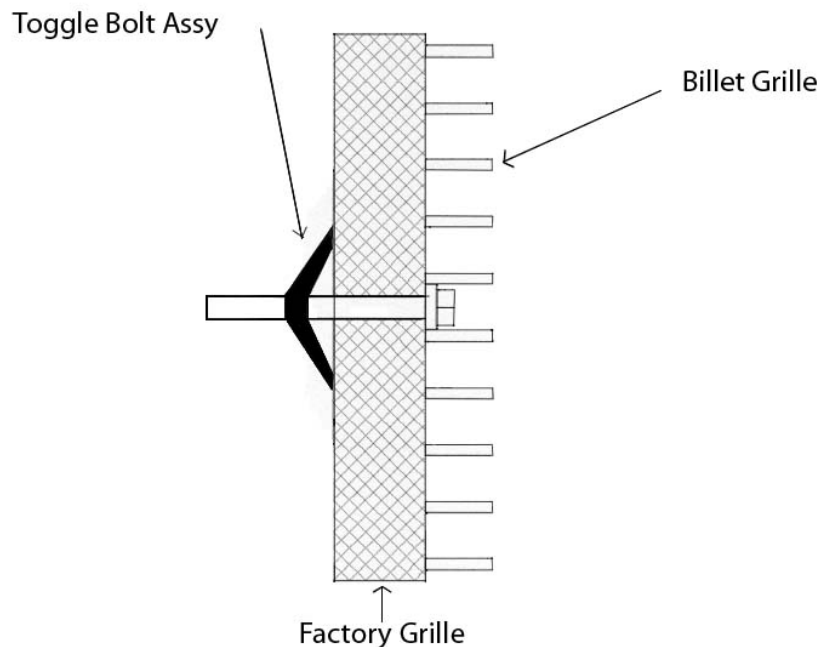

**STEP 1** Place the supplied grille wings into the openings beside the headlights and center. Next you will need to mark the hole locations using a sharpie or scribe.

**STEP 3** Next move to a 3/8" drill bit, and re-drill holes to the larger size. Note: Do not drill over the 3/8" size. The fasteners are designed to work with the 3/8" hole size only.

**STEP 5** With rubber nuts attached place the wing back into opening and push rubber well nuts into the just drill holes. Now as you tighten the bolts the well nuts will spread and will be held securely in place.

**STEP 2** After marking hole locations remove the grille wing from opening. Now using a 3/16" drill bit, drill the just marked locations this will act as a pilot hole.

**STEP 4** Place the supplied 10-24 x 1" phillips bolts through the holes in grille wing, now loosely attach supplied rubber well nuts to the backside as shown below. The washer end or the head goes to the backside of the wing.

