



Installation Guide

Part # 4459

(-1, Brushed; -2, Polished; -3, Black)

This model fits:

Thank you for purchasing the CW Grilles **4459.**

2010-12 Chevy Camaro SS & RS

For installation of billet grilles that require cutting of the stock shell, proper tools, knowledge and skill are needed. CW is not responsible for care & accuracy of the installation, only for Fit & Finish of its products. Use a qualified installer or contact original vendor for references to complete all instructions.

Hardware Included


- (4) 10-24 X 5/8 PHILLIPS BOLTS
- (4) 10-24 U-NUTS

Brackets Included

- (2) B-4459-1 BRACKETS
- (2) B-4459-2 BRACKETS



STEP 1 Start by locating the brackets, the TOP brackets have a longer punched hole end than the bottom brackets. Place the supplied u-nuts on each end of the TOP brackets that have a hole punched in them.

STEP 2 Next locate the BOTTOM brackets, place supplied u-nuts on the hole punched ends.

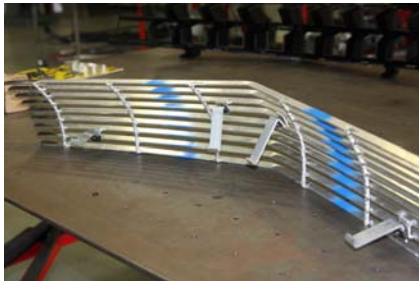

STEP 3 Now loosely attach the brackets with the supplied 5/8" phillips bolts, to the corresponding mounting tabs in billet grille. Top brackets go to the top mounting tabs and bottom brackets go to the bottom mounting tabs.

STEP 4 Next you will need to remove the stock chevrolet emblem from vehicle. Do so by releasing the (4) clips from the backside of the emblem. You may reach through the front of the stock grille shell, then using a short regular screwdriver to aid in releasing the clips. Another option for you is to remove the steel plate that covers the core support area. By removing the steel plate allows the installer to more visually see to release and remove the emblem. To remove steel plate do so by removing the plastic push pull rivets and the 2 Torx bolts, and also the (2) 10mm bolts.

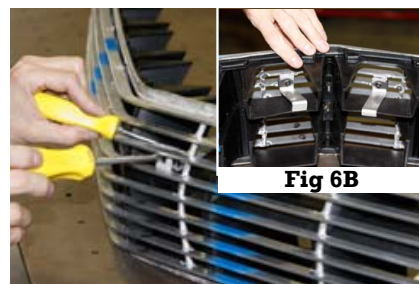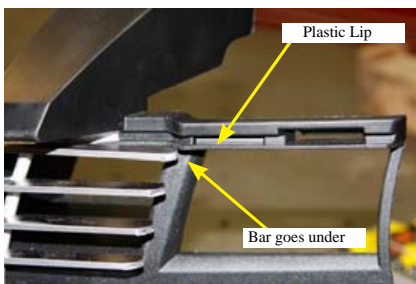

STEP 5 Place billet grille into opening and center. Take note of the top bar of the billet grille, it will need to be placed under plastic lip of stock shell as shown.

STEP 6 With billet grille in place use a regular screwdriver and rotate the Top brackets so that they catch the plastic of the stock grille shell (Fig 6B).

STEP 7 Do not tighten until you get the bottom brackets rotated and in place. Using the same process to rotate brackets in previous steps do so for the bottom brackets

STEP 8 With all brackets in place tighten all hardware.

