

Thank you for purchasing the CW Grilles **4474.**


For installation of billet grilles that require cutting of the stock shell, proper tools, knowledge and skill are needed. CW is not responsible for care & accuracy of the installation, only for Fit & Finish of its products. Use a qualified installer or contact original vendor for references to complete all instructions.

Hardware Included


- (2) 10-24 x 2 PHILLIPS BOLTS
- (2) 10-24 TOGGLE WINGS
- (8) 10-24 x 1 1/4 PHILLIPS BOLTS
- (10) 10-24 U-NUTS

Brackets Included

- (2) B-4474-1 BRACKETS
- (2) B-4474-2 BRACKETS
- (2) B-4205-1 (4474-3) BRACKETS
- (4) T-004 SQUARE SPACERS

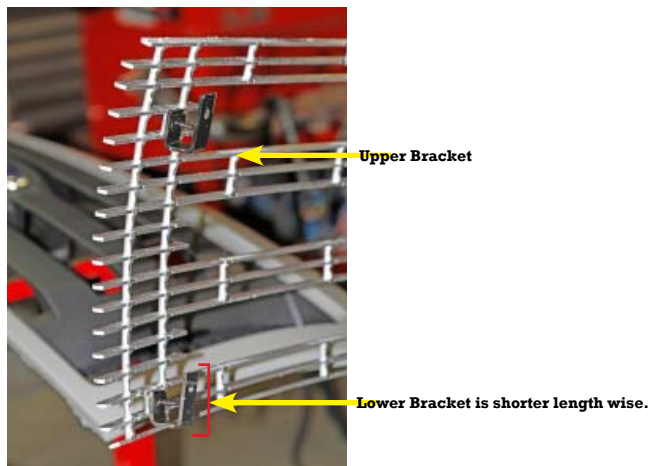

STEP 1 Locate the 4 supplied brackets. Take note that there are upper and lower specific brackets. The upper brackets are slightly larger than the lower. Place supplied u-clips on the short end of all brackets. Now attach the brackets to billet grille using the supplied 10-24 x 2" bolts as shown above.

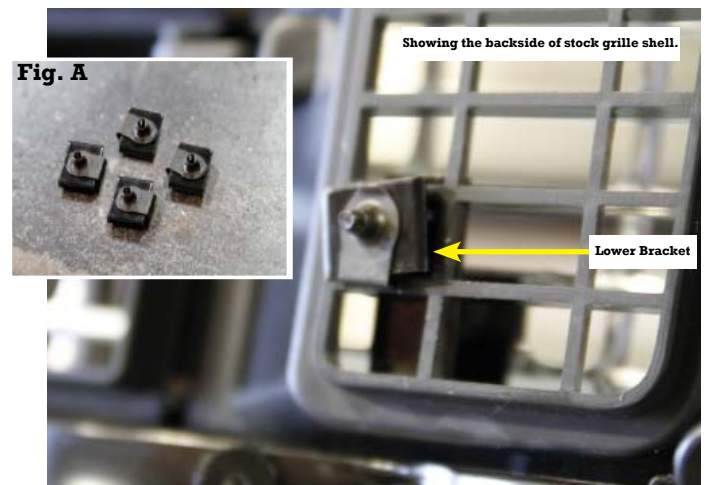

STEP 2 Place the billet grille into the grille shell and center. Using the supplied 10-24 x 1 1/4" bolts push them through the upper mounting holes in both brackets sets. Next place the 10-24 u-clips on the square tabs (Fig. A) and attach the square tabs using the already placed 10-24 x 1 1/4" bolts.



STEP 3 Attach the (2) center brackets. Place the supplied u-clips on the brackets as shown in Fig. B. Push the supplied 10-24 x 2" bolts through the 2 upper center mounting tabs in billet grille. Next place the brackets and rotate as necessary to catch the backside plastic and then tighten. With all brackets in place check alignment and then tighten all hardware.