



# Installation Guide

## Part # 4483

(-1, Brushed; -2, Polished; -3, Black)

This model fits:

## 2011-14 Chevrolet HD Bumper Grille

Thank you for purchasing the CW Grilles **4483.**



For installation of billet grilles that require cutting of the stock shell, proper tools, knowledge and skill are needed. CW is not responsible for care & accuracy of the installation, only for Fit & Finish of its products. Use a qualified installer or contact original vendor for references to complete all instructions.

### Hardware Included

- (4) 10-24 X 1 PHILLIPS BOLTS
- (4) 10-24 U-NUTS

### Brackets Included


- (2) B-4483-1 BRACKETS
- (2) B-4483-2 BRACKETS

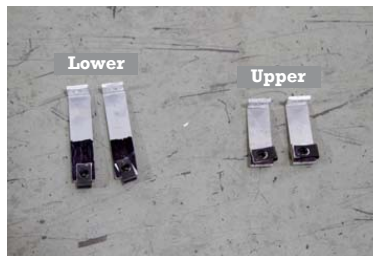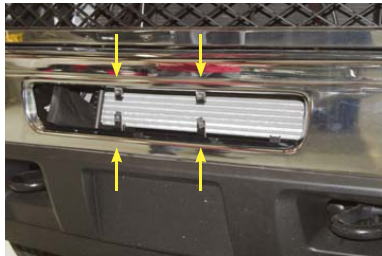

**STEP 1** Start by locating the (4) stock bolts located in the bumper opening, that you will use for installing the supplied brackets see. The arrows are pointing to the stock bolt locations. For the bottom (2) bolts you will need to remove (2) plastic rivets holding rubber weather material that is covering the stock bolts. Using a 7mm ratchet remove the (4) bolts.

**STEP 2** Using a 7mm ratchet remove the (4) bolts. Next place the supplied 10-24 u-nuts on the long ends of both the upper and lower supplied brackets as shown.

**STEP 3** Next attach brackets into bumper opening using the stock bolts and stock locations to secure brackets in place. The bend in the brackets go to the inside toward Trans and Intercooler.

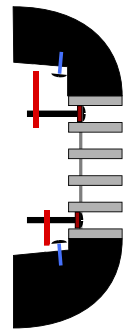

**STEP 4** Place billet grille into opening placing one in first and pushing past the opening and then bring the opposite end in and slide back. Align mounting tabs in billet grille with the brackets and secure with the supplied 10-24 x 1" bolts. Tighten bolts without over tightening.

Note: A drop of red or blue loctite on the bolt threads will significantly reduce the chance of bolts backing out due to road vibrations.



